


CLEANING THE SPRAY GUN COMPONENTS



1. Perform Pressure Relief Procedure,

2. Remove spray gun from the paint hose using adjustable wrenches.

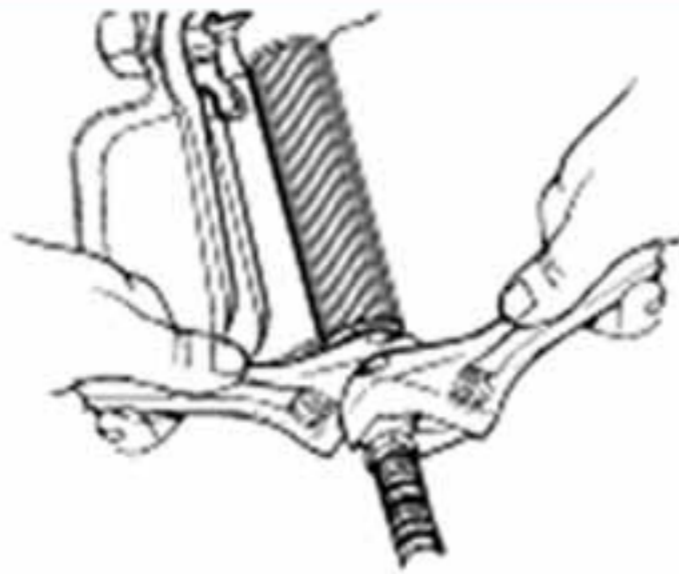

3. Remove filter from spray gun (Refer to Unclogging the Spray Gun Filter)

4. Remove spray tip from spray guard assembly.

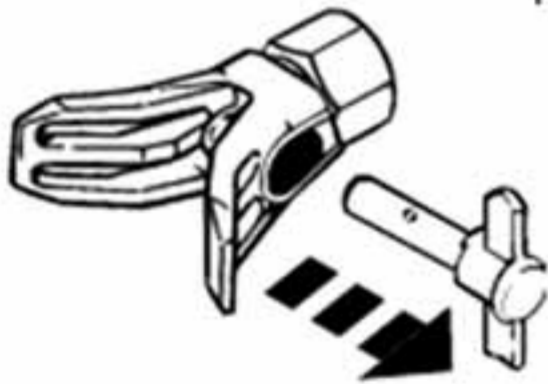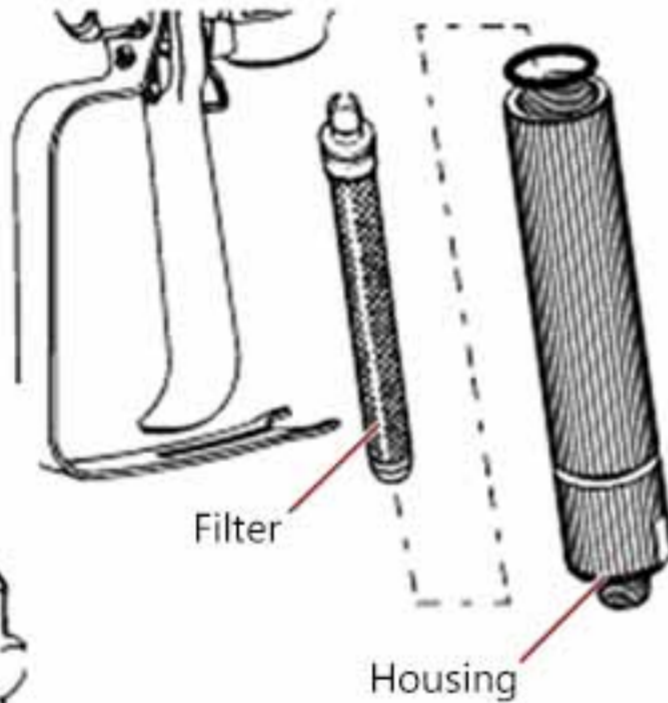


5. Clean spray tip and filter with a soft-bristled brush and the appropriate cleaning solution. Be sure to remove and clean the washer and saddle seat located in the rear of the spray tip assembly.



6. Pour a few drops of household oil inside the gun housing (see area indicated below by arrow).

7. Reassemble spray gun:

- Install gun filter tapered-end first,
- install spray tip, saddle seat and washer, and replace spray guard assembly.

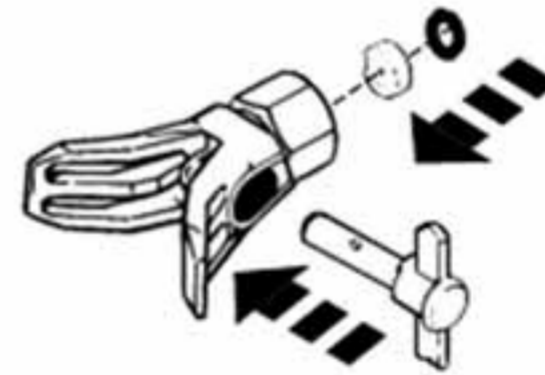

8. Thread the paint hose back onto the spray gun. Tighten with a wrench.

IMPORTANT!

If you cleaned your pump using mineral spirits, it is recommended that you flush the pump again using warm, Soapy water to prepare it for storage. Repeat Flushing the Pump instructions.